

Up to -65 °C


Lock in freshness with cryogenic storage

Simple but extraordinary


Horizontal type Features



Lock in freshness with cryogenic storage

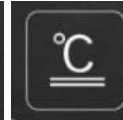

Precise intelligent temperature control

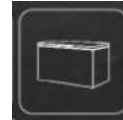

Simple appearance design



Automatic air pressure balancing hole




Energy saving



All copper tube evaporator



Sturdy and durable

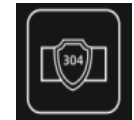

SUS304 liner



Technologically advanced refrigeration system

Adopting SECOP compressor, Cascade Cooling refrigeration technology, high efficiency refrigerant mix and Ebmpapst silent fan.

The cabinet cools down faster, more reliable and durable and deeply retains the nutrition and taste of high-end ingredients for a long time.



Precise temperature control up to 0.1°C

Touch control microcomputer, precise control of freezing temperature.

Enjoy the freshness of every moment.

The control panel is located in the upper part of the cabinet to facilitate users to observe the real-time operation status of the equipment.



Carefully selected materials for high quality

The machine adopts Honeywell Solstice LBA fourth generation environmentally friendly materials, which has better thermal insulation performance and 10% more energy efficiency than traditional thermal insulation materials



Carefully selected materials for high quality

Newly designed automatic air pressure balancing valve makes the door open smoothly and reduces waiting time. Removable de-icing / can be automatic or manual.

The outer shell parts are made of thickened galvanised steel and adopt electro-static spraying process.

The inner liner is made of high quality 304 stainless steel.Metal handle.

Enhance the anti-corrosion performance of the whole machine from the inside to the outside, and extend the product service life.



Simple but extraordinary, easier to clean.

Integral shaped sheet metal door body, no wrapped edge cabinet opening design.

Large rounded corners, more simple and friendly.

Reduce dusty corners, easy to clean.

Various colours Perfect Fusion
(Only for MF-60H169)
Available in 3 elegant and stylish colours.
Keeps up with the latest home trends.
Matches perfectly with your home environment.



Cyan



Light gray



Gold

Scenarios show



Four capacities for more choices

Four capacities to choose from to meet different usage requirements



Specification

Model	MF-60H169			MF-60H269	MF-60H369	MF-60H499
Color	Cyan	Gold	Light gray	Light gray	Light gray	Light gray
Net capacity(L)	169			269	369	499
External dimensions W×D×H(mm)	940x705x865			1150x795x900	1460x795x900	1870x795x900
Internal dimensions W×D×H(mm)	750x410x625			960x500x625	1270x500x625	1680x500x625
Net weight(Kg)	70			90	103	126
Voltage/Frequency(V/Hz)	220V/50Hz			220V/50Hz	220V/50Hz	220V/50Hz
Power(W)	220			500	500	500
Current(A)	1.8			3.2	3.2	3.2
Power consumption(KWh/24h)	1.65			2.98	3.55	4.85
Compressor	Embraco inverter compressor			SECOP inverter compressor	SECOP inverter compressor	SECOP inverter compressor
Noise dB(A)	38			55	55	55
Internal material	SUS304					
External Material	Sprayed galvanised steel sheet					
Evaporator Material	Copper pipe					
Temperature range(°C)	-15 to -65 °C					
Cooling method	Direct cooling					
Foam thickness(mm)	95					
Padlock	Y					
Air pressure balance hole	Y					
Caster	Y					
Compressor protection from high temperature	Y					
Alarm buzzer	Y					
Alarm	High and low temperature alarm			Y		
	Sensor failure			Y		
	Over ambient temperature			Y		